

hush.  
*acoustics*

# Timbre

Spec Document




Check the product page

*Quiet by Design*



Timbre V1 · 'Pinnacle Walnut' Laminate · Restaurant

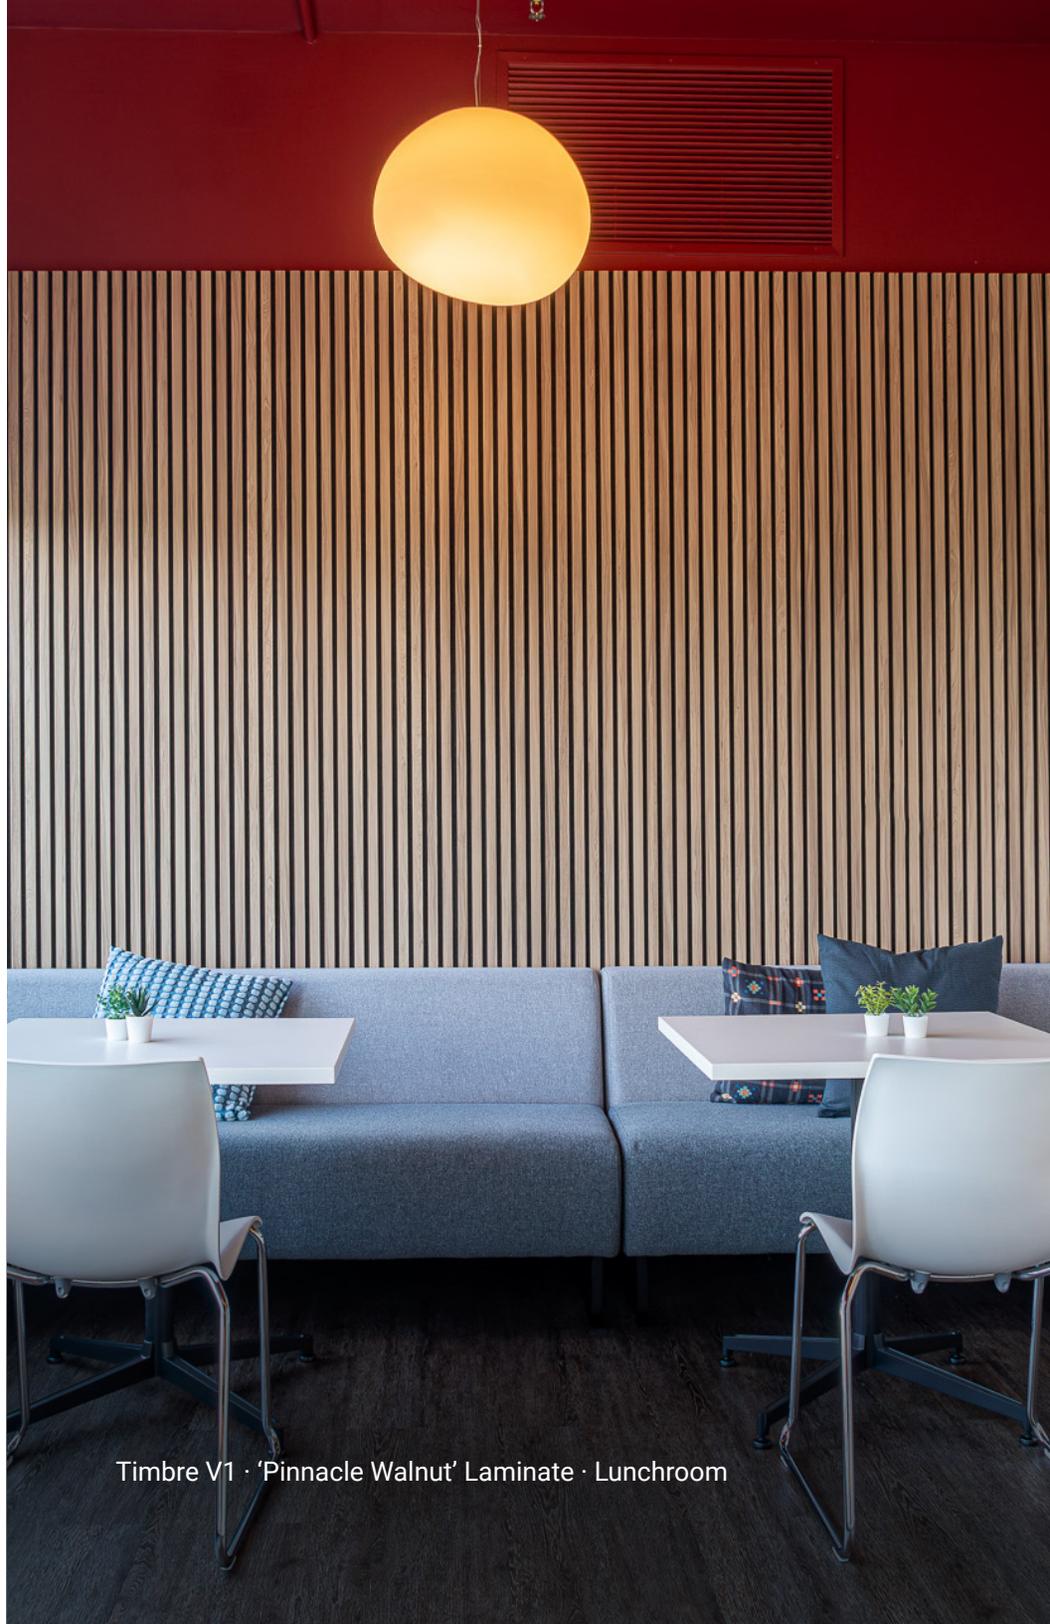

Timbre V1 · 'Pinnacle Walnut' Laminate · Lunchroom


# Timbre

Combining the acoustic tiles with wood finish panels will add grace and sophistication to any design.

## PRODUCT SPECIFICATIONS

Composition	100% PET (Polyethylene Terephthalate); 60% recycled material
Thickness	26mm total thickness
Product Placement	Walls, Ceiling
NRC	0.5 - 0.8
Fire Rating	CAN/ULC-S102 Class A ASTM E84 Class A
Sustainability	100% Recyclable
Warranty	2 Year Limited


## NOISE REDUCTION COEFFICIENT COMPARISON

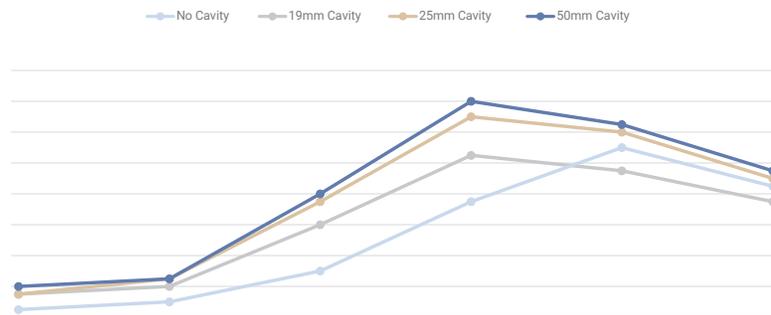

Full NRC comparison available upon request



TIMBRE V1

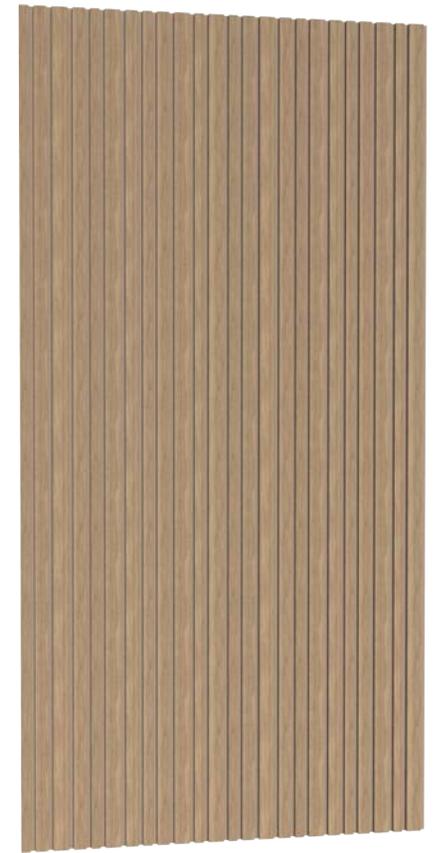

TIMBRE V2

# Timbre

## GREENGUARD® GOLD CERTIFICATION

Hush Acoustics has achieved full GreenGuard® Gold sustainability certification, a mark of excellence that ensures our products meet strict standards for low chemical emissions, promoting healthier indoor air quality.

This recognition gives architects, designers, and consumers confidence in choosing Hush for environmentally responsible solutions. Beyond sustainability, Hush's felt products offer excellent sound-absorbing properties, making them ideal for creating quieter, more comfortable spaces.

## SUSTAINABILITY

Manufactured from 100% PET(60% recycled material), our felt products demonstrate our commitment to both environmental stewardship and functional design, contributing to a greener and quieter future. It comprising of flame-retardant fiber as new material ensuring ASTM E84 class A certification. The high strength of PET panels in comparison to its weight is the key to its superior energy efficiency.

## FUNGAL RESISTANT

Independently tested by EMSL Canada, Hush P.E.T. felt showed zero mold growth under ASTM C1338 laboratory conditions, confirming exceptional durability.

## WARRANTY

2 year limited warranty. See F.A.Q. page on our website for more information.

## COMPLIMENTARY DOCUMENTATION



Environmental  
Product Declaration



Felt  
Maintenance Guide



Flame  
Spread

See Resource Hub page on website for more documentation

## TIMBRE

*mm*

*inches*

600 x 2400

23.6 x 94.5

\* Custom sizes available upon request


# Timbre

## HOW TO SPECIFY

### 1. Select Design




V1

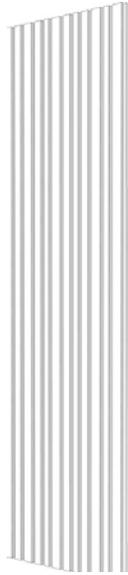

V2

### 2. Select Size

See [page 4](#) for full size chart



### 3. Select Colour



Element



Wood Grains & Laminates




Luxe Series

# Timbre

## WOODEN SLAT OVERVIEW

Topped with WilsonArt® Laminate


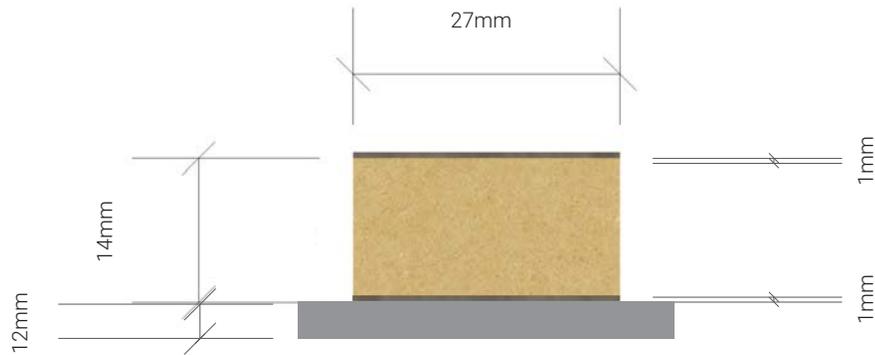


## MDF BACKING OPTIONS



All Element Colour Options Available

## PLAN VIEW

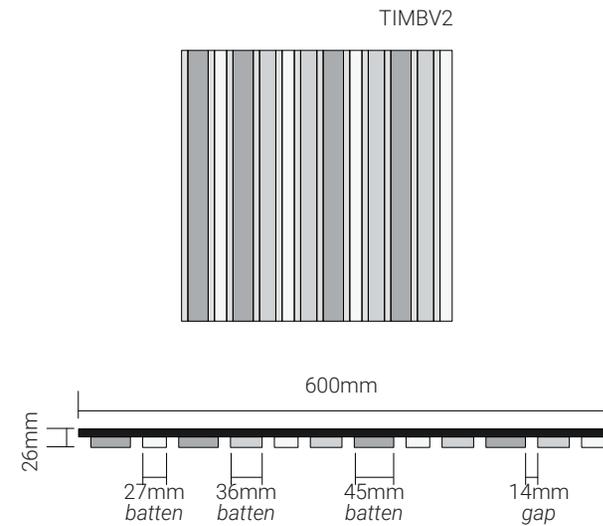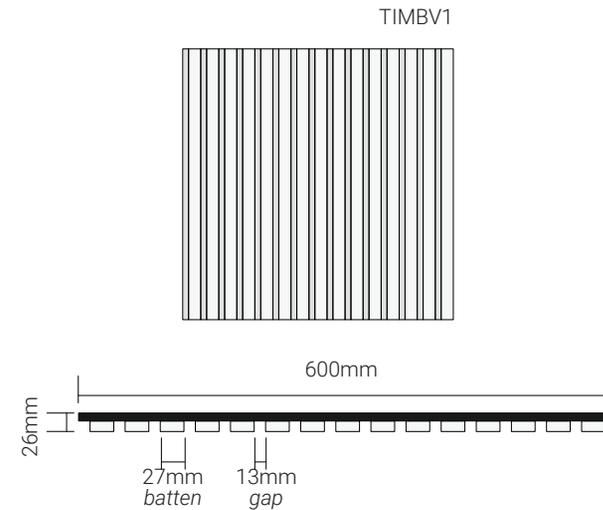


# Timbre


Prior to installation, installers are advised to unpack and lay out panels to determine the most aesthetically pleasing arrangement.

## INSTALLATION INSTRUCTIONS


1. Identify the back of the Timbre panel. Working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below.




2. Your Timbre panel is now ready to be installed on the wall in the desired location.  
*(Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying adhesive).*

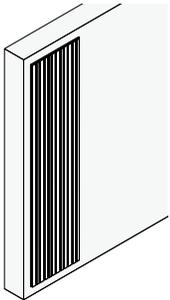


3. With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel shown below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process for both corners at the base of the panel. Your Timbre panel is now fully installed.

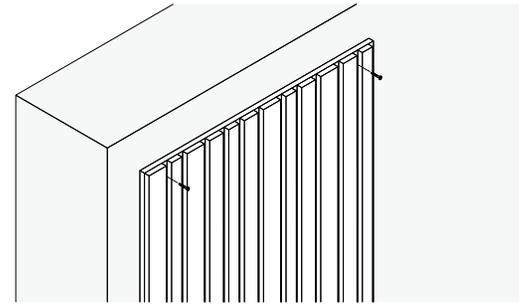

4. In the event that you need to make cuts to your Timbre panel, begin by placing removable tape over the intended cut line.  
*Important note: Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats. You may need to mark and cut on the back of the panel to accommodate the direction of blade rotation.*

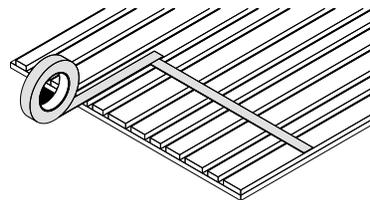

5. Now, using a pencil, mark your cut line on the tape.

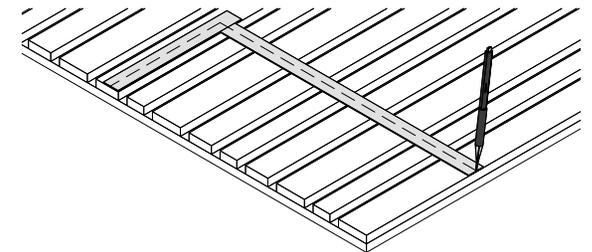


# Timbre

Prior to installation, installers are advised to unpack and lay out panels to determine the most aesthetically pleasing arrangement.


## INSTALLATION INSTRUCTIONS (CONT.)

6. Now cut the panel along the marked line using a sharp saw blade.

*Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats.*

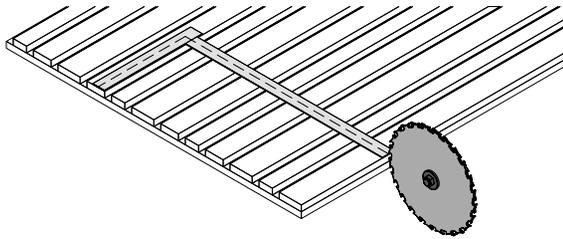


7. Remove the excess removable tape from your Timbre panel. If the cut edges of the slats are sharp, lightly sand the top edge using a medium-fine sand paper.

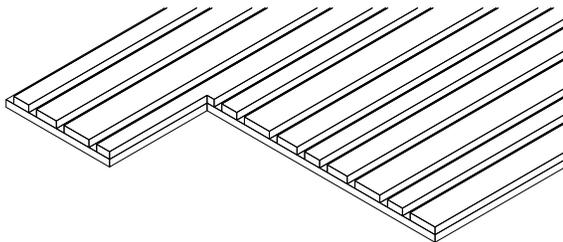


8. On the back of the Timbre panel, working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below. Your Timbre panel is now ready to be installed on the wall in the desired location.


*Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying the adhesive.*



9. When placing Timbre panels beside each other, be sure to install them with the overhanging felt portion always butted up against a non-overhanging felt edge, this will ensure the correct spacing continues throughout the install for a seamless appearance.

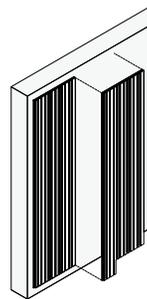

10. With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel as shown below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process for both corners at the base of the panel. Your Timbre panel is now fully installed.

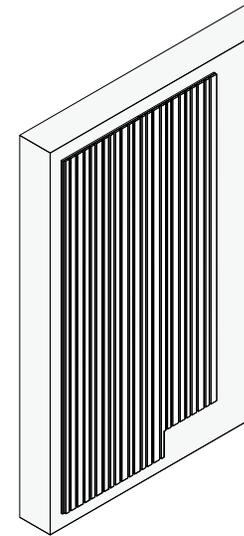

# Colour Options

PLEASE NOTE: The images are only a sampling of the colours. Order a physical colour sample to obtain an accurate representation of our acoustic colours.


## ELEMENT



SUNFLOWER   APRICOT   WINE   CHERRY   TAMARIND   SALMON



GOLD   CARAMEL   CINNAMON   PEARL   MAPLE   MOCHA

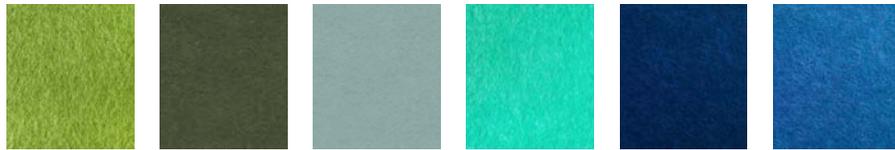

MOSS   FORREST   CRYSTAL   AQUAMARINE   LAPIS   OCEAN



LAKE   ICE   LILAC   CHARCOAL   SLATE   OYSTER



SHADOW   CASPER   FOG   SNOW   VANILLA

## WOOD GRAINS



HONEY PINE   ANTIQUE OAK   WALNUT   BLACK TEAK   GREY MAPLE



SAND   CHERRY   MAHOGANY   ASHWOOD   WHITEMIST

## WILSONART LAMINATES



FAWN CYPRESS   WILD CHERRY   STERLING ASH   ASIAN SAND



NEOWALNUT   MORELIA MANGO   ASTRO STRANDZ

Full line of WilsonArt® Laminates available

All standard Hush laminates come in the Standard HPL Finish

# Colour Options (cont.)

PLEASE NOTE: The images are only a sampling of the colours. Order a physical colour sample to obtain an accurate representation of our acoustic colours.

## LUXE SERIES





Timbre V1 · 'Fawn Cypress' Laminate · Reception

# hush. *acoustics*

Tailored for Architects,  
Interior Designers, and  
General Contractors, we serve  
as a fast, expert, and reliable  
partner for all your project ideas.

## *Quiet by Design*



Proudly Made  
in North America



2 Year  
Limited Warranty



**GreenGuard Gold®  
Certified**  
All Hush products  
exceed GreenGuard  
Gold® indoor air  
quality standards



**Fungal Resistant  
Certified**  
EMSL Canada verified  
zero mold growth  
for Hush P.E.T. felt  
(ASTM C1338).

hello@hushacoustics.ca · 204.454.1950  
31 Limestone Bay, Stonewall, MB  
Canada · R0C 2Z0

Follow us on Instagram  
@hush.acoustics

**hushacoustics.ca**

